




Changing the TBR0500 from Charcoal to Gas

Removing the Charcoal plug


1. Open the Control Cabinet door
2. Remove the 2 screws that hold the plug in place
3. Slide the plug out

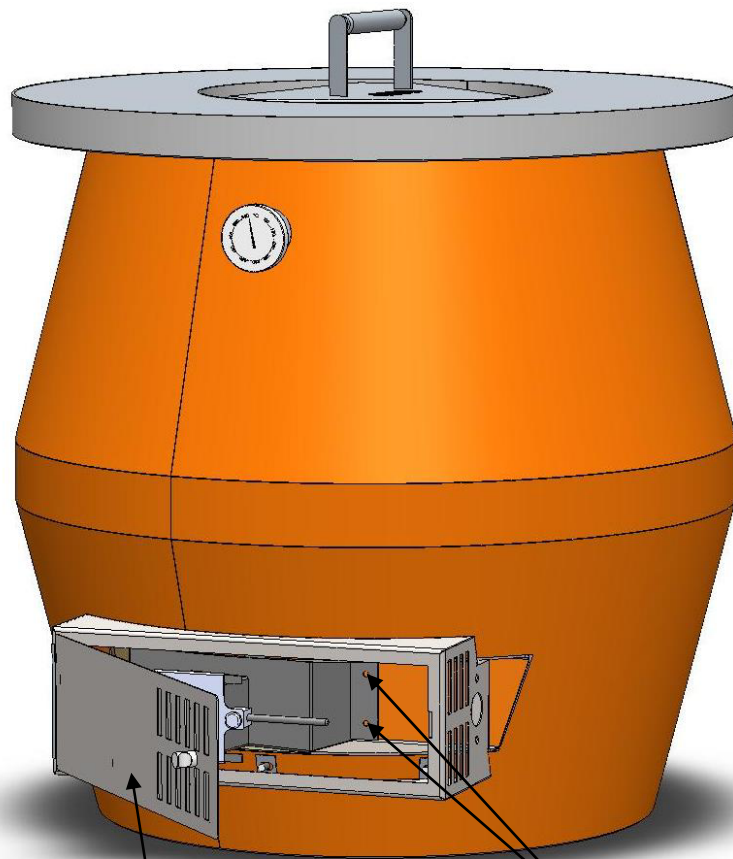


Control Cabinet Door

Remove the 2 screws holding the
plug in place and slide plug out

Removing the Gas system

1.  Turn off and disconnect the gas line from the inlet to the cabinet
2. Open the Control Cabinet door
3. Remove the 2 nuts holding the valve bracket in place
4. Slide the entire Gas Assembly slightly to the left and then slide the system out

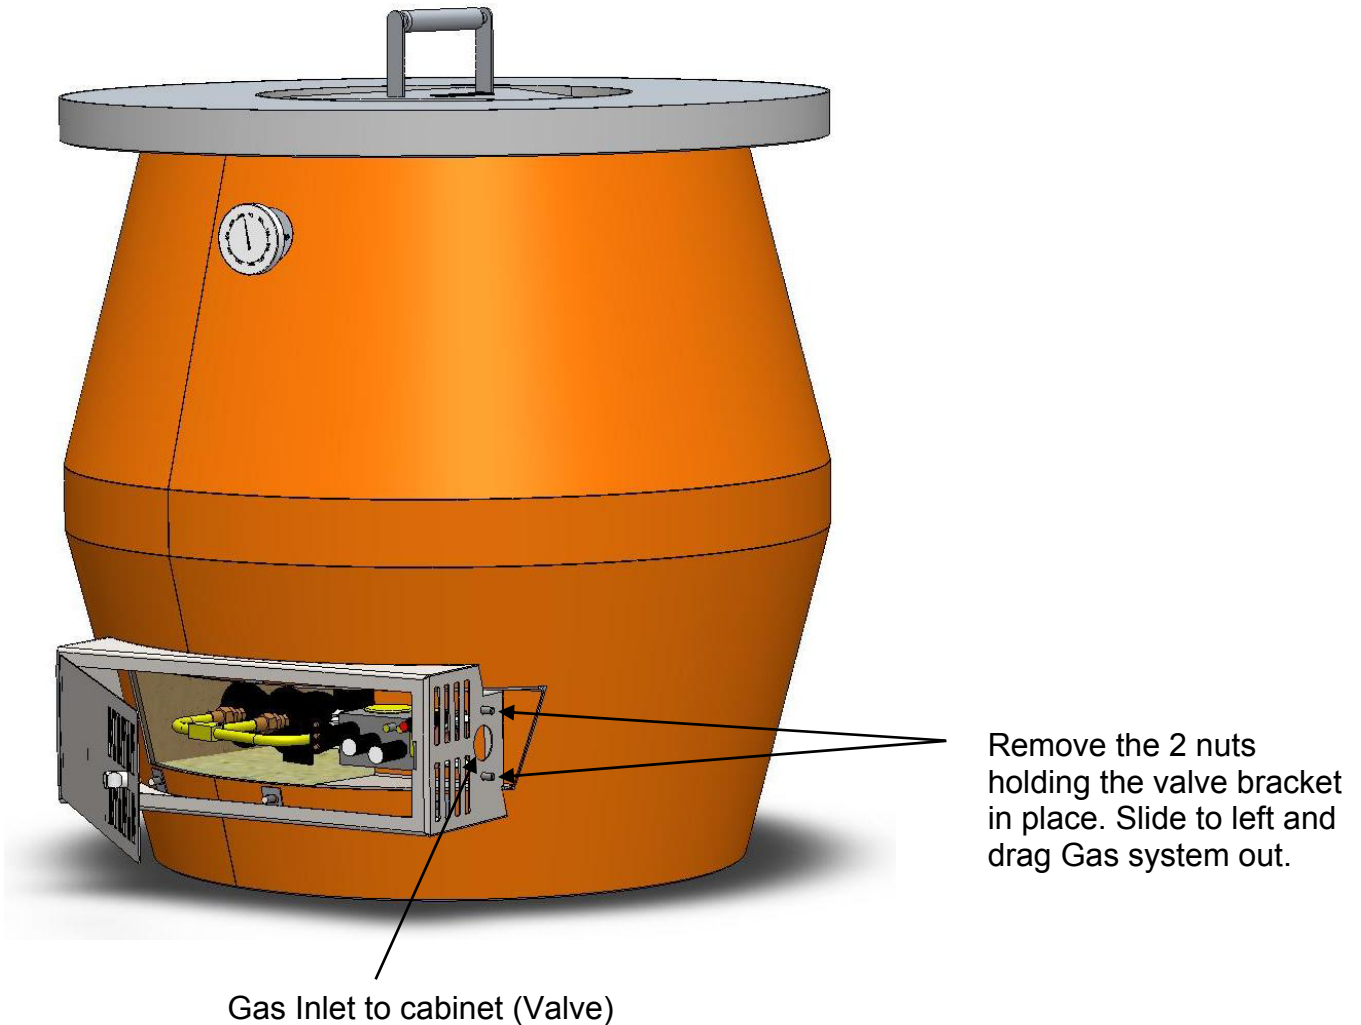

Install in reverse order.

NOTE: If changing from Gas to Charcoal, use only very short screws to mount the plug as there will be refractory material directly behind the stainless steel. Be careful not to crack the refractory when inserting screws.